


AC REMOTE GEN 2 OWNERS MANUAL

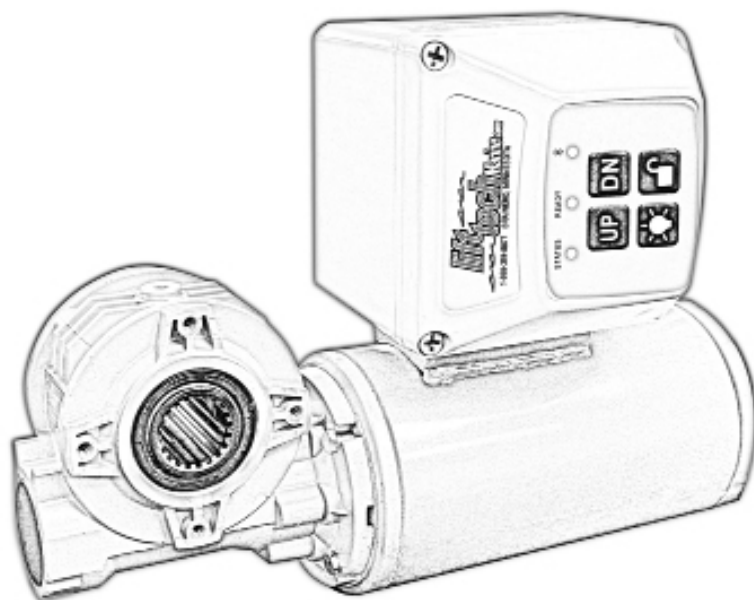

WWW.LIFTTTECHMARINE.COM

Operating the AC Motor:

When the lift is going “up” the gear head should be going clockwise. When the lift is going “down” the gear head should be going counterclockwise. If it’s the opposite direction this means your lift was let down too far and is backwound. To fix this, let the lift down, when it runs out of cable it will wind itself up correctly and start going up.

Control Panel:

The control panel works the same as the remote controls. Press UP to go up and DN to go down. Press the light button to turn the canopy light on or off. Press the lock/unlock button for 5-10 seconds to lock the control panel. Press it again for 5-10 seconds to unlock the control panel. When the control panel is locked the lights will blink for a set amount of time and then stop. The Bluetooth App will still work when the control panel is locked. When plugged into power the READY light will be a solid green and the Bluetooth symbol will blink blue. When you pair a phone through bluetooth the light will be a solid blue and no longer flash. The STATUS light will turn solid red when any button is pushed. If the remotes work and the control panel doesnt or vise versa, unplug the unit from power for 2 minutes. If the control panel is locked the lights will flash when you press any button.

Remotes and Bluetooth:

The two blue remote controls that come with the unit are already paired. To pair another remote control, visit our website for instructions. You can also download the phone app and control your motor with your phone. See the included Bluetooth instructions.

Off-Season Storage:

We recommend our storage cover for your motor if you are going to leave it sit outside during the winter months. Our storage cover will breathe and let moisture out while your not using your motor. If you decide to cover the motor with a bag instead, make sure not to seal it completely or condensation can develop and the warranty will be void.

Power Outage:

In case of a power outage, use the provided back up bit (inside floatie) on the end of the shaft with your drill. Visit our website to watch a video on how to use the back up bit.

Power Requirements for AC:

All power used on your dock or lift needs to be GFI Protected at the shoreline. Extension Cords must be 12/3 and under 150 feet. Circuit Breaker 20 AMPS GFI.

Maintenance:

Our motors are self-lubricating and do not need any maintenance.

Canopy Lights:

We offer Canopy lights that can plug into your unit and are controlled by the remotes. If you use a different brand of canopy lights they might not work. Our canopy lights will automatically shut off at 7 minutes.

Website:

Go to www.liftechmarine.com for more information, troubleshooting and how to videos.

We would like to take this opportunity to say thank you. We value you, as a customer. Should you ever have an issue please give us a call at 866-319-8877 or send us an email at customerservice@liftechmarine.com