
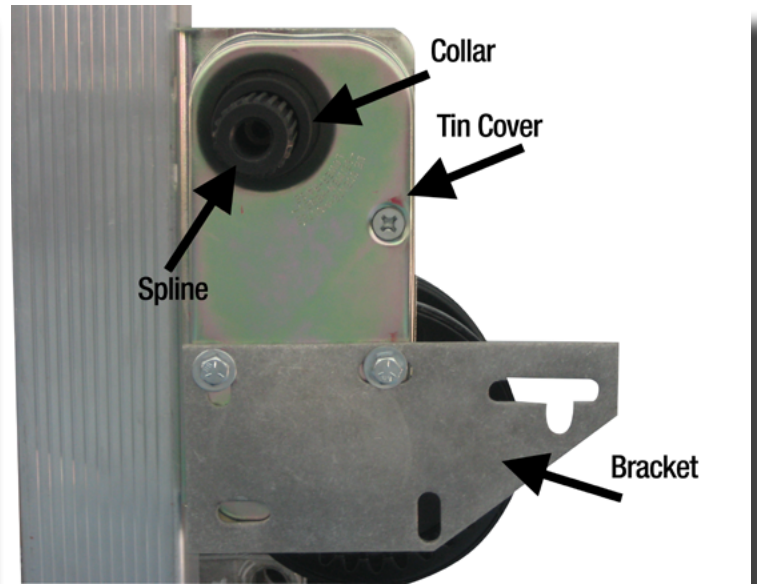


Dutton Lanson B2500 / B3500 Installation Guide


Always Lower The Boat Lift Before Attempting Assembly.

Tools Required: Phillips Screwdriver, Crescent Wrench, 3/4 Wrench and 9/16 Wrench..

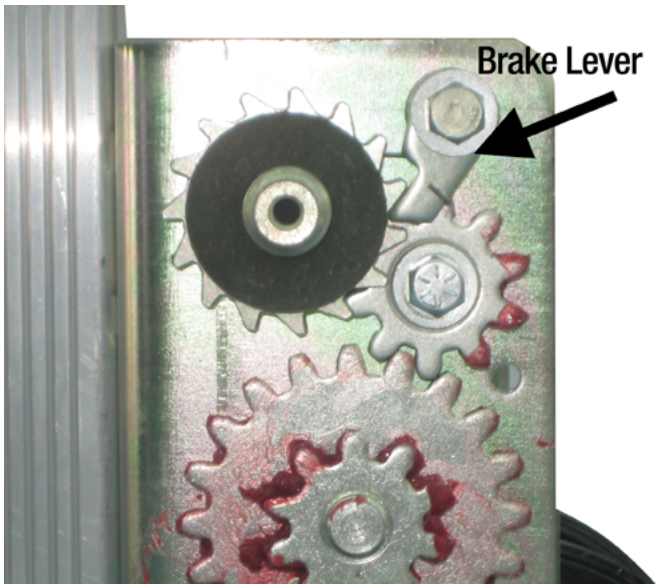



1. Lower the Boat Lift.
2. Remove the Wheel.
3. Remove the Tin Cover.
4. Remove the Brake Lever.

5. Replace Tin Cover Screws with Bolts Provided in the kit. Install Aluminum Bracket as Shown. (see page 2 for mounting options)
6. Install Spline and Collar as Shown.

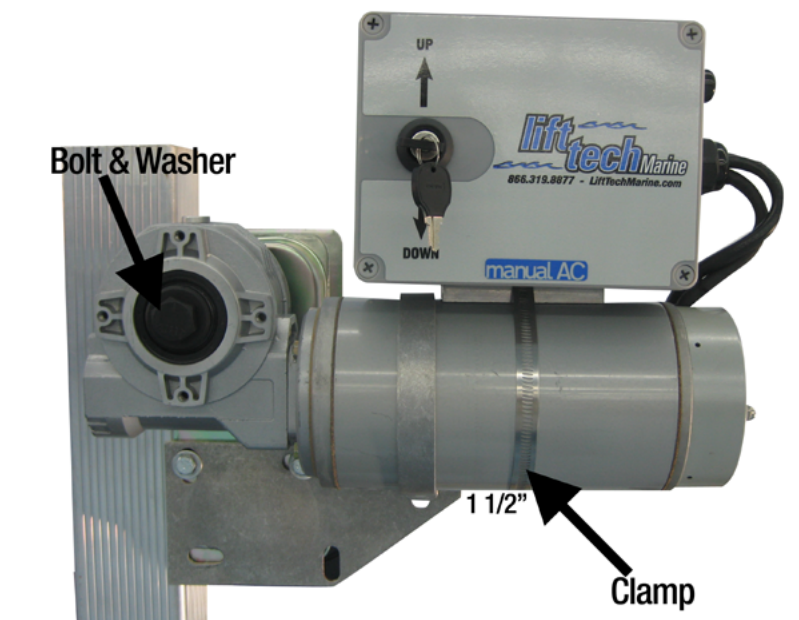


7. Move Clamp 1 & 1/2 Inches Towards the End of the Motor as Shown. Install Mounting Strap and Bolt to Bracket. (see next picture) Tighten Motor Bolt to Approximately 70 Foot Pounds.


8. Tighten Mounting Strap.

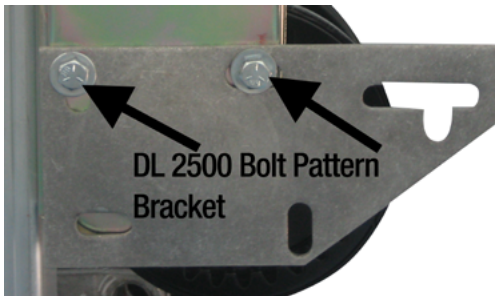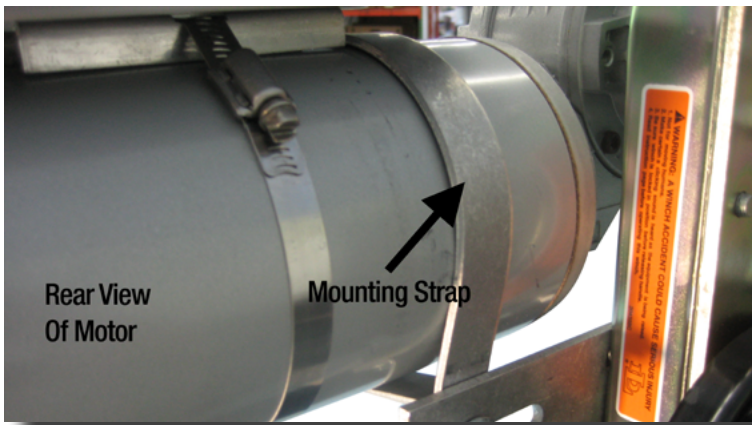

DL2500 Bolt Pattern

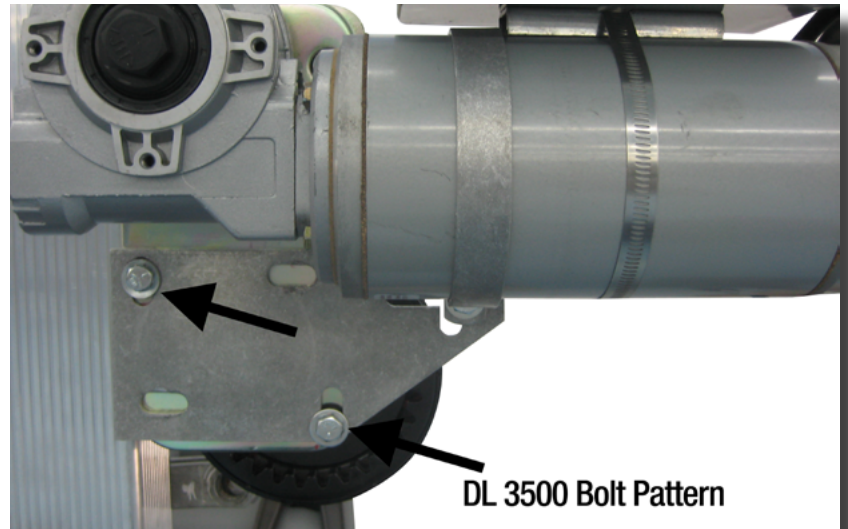

DL3500 Bolt Pattern

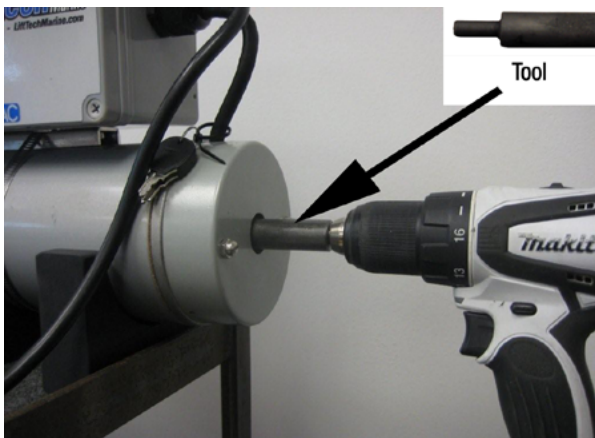

Plug in and Enjoy!

In case of a Power Outage. This Tool may be Inserted into a Drill to Raise or Lower your Lift.

Recommended Extension Cords up to 150 feet 12/3.

Any question regarding Electrical current requirements please call your Authorized Dealer or Lift Tech Marine 1-866-319-8877.

Caution: All power used on your dock or lift needs to be GFI protected at the shore line.